

bliss™

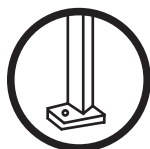
outdoors

BBQ GRILL BBQ GAZEBO CANOPY

BCA-100

READ THIS BEFORE ASSEMBLING & USING THIS PRODUCT

IMPORTANT: This is a shade structure, not intended to use in rain, very windy or other severe weather conditions. The structure may collapse due to water pooling on canopy or strong winds. The canopy top must be loosened and/or removed to avoid weather damage.



Secure the frame



Do not use during windy conditions



Do not use during severe weather conditions



Keep away from heat sources and open flames


 
 
 
 
 








 
 

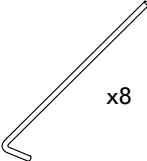
CARE AND MAINTENANCE:

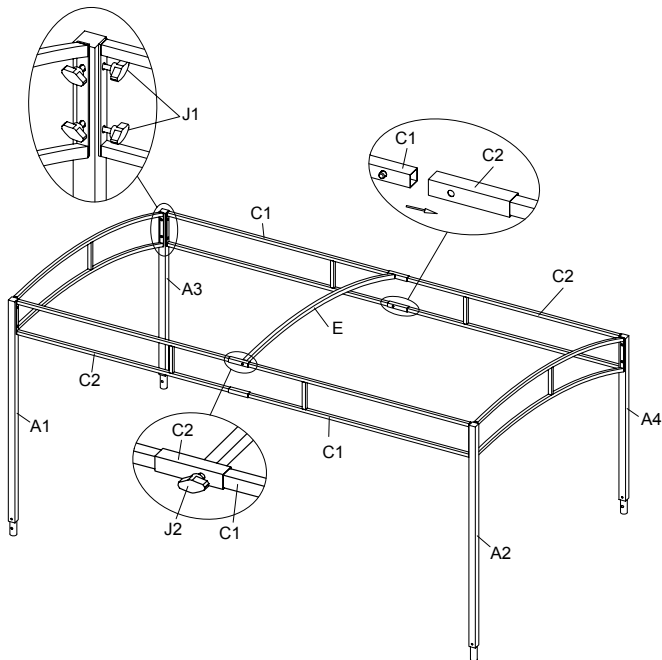
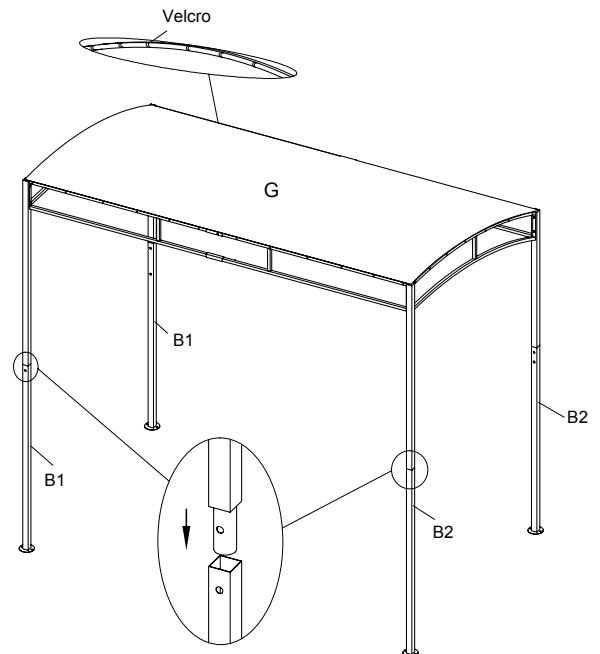
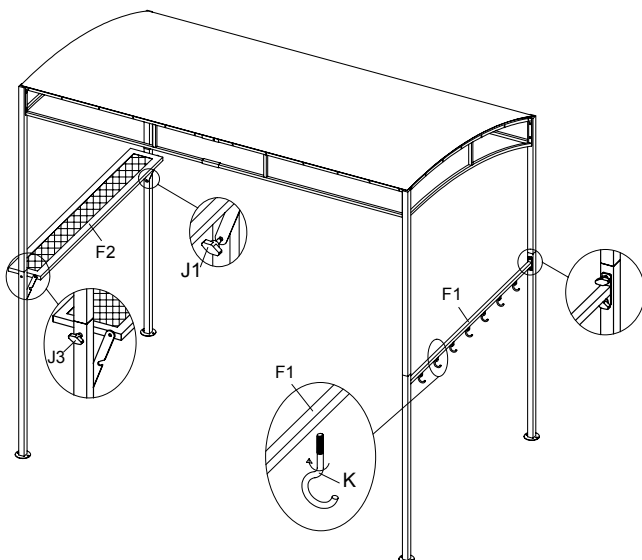
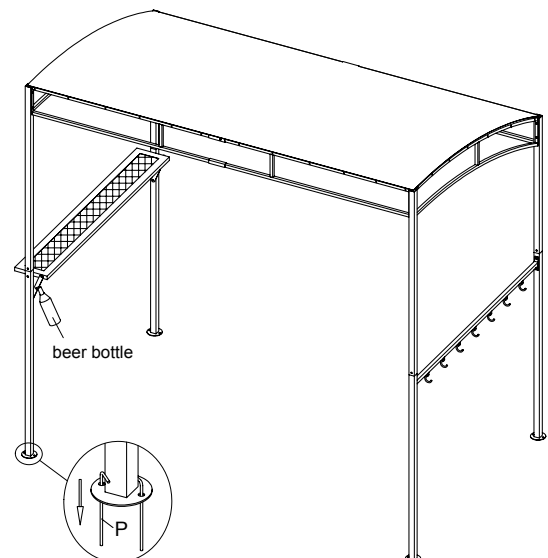
- KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC. This tent is made with fabric that meets CPAI-84 specification for flame resistance. It is not fire proof. The fabric

will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame resistant properties ineffective.

- Always secure your gazebo with all possible measure. It's crucial to do so once you have the gazebo up to minimize the impact of unexpected wind gusts.
- Do not use in very windy or rainy weather. Please take a minute to loosen or remove the roof canopy. Wind and rain can damage the gazebo and may result in injury to you or others.
- Hand wash canopy with a mild solution of soap and water, rinse thoroughly, and dry completely. Do not use bleach or solvents.
- To clean the frame, simply wipe down with a damp cloth.
- Gently tighten bolts and nuts if frame comes loose.
- Ensure you read the user manual and familiarize yourself with the product before use.

PIECES:

A			
A1  x1		A3  x1	
A2  x1		A4  x1	
B			
B1  x2		B2  x2	
C1	C2	D	E
 x2	 x2	 x2	 x1
F1	F2	G	J1
 x1	 x1	 x1	 x22
J2	J3	K	P
 x2	 x2	 x7	 x8

ASSEMBLY:**1.****2.****3.****4.**

If you have any questions or comments,
please call the Bliss Outdoors™ customer service department at:

1-800-695-2626

©2021 Bliss Outdoors™ is a Trademark of Snow Joe, LLC | Made in China