



ROTATING ARTIFICIAL TREE STAND

OPERATOR'S MANUAL

A Division of Snow Joe®, LLC

Model H092-RM

Form No. SJ-H092-RM-880E-V1

**THANKS FOR YOUR PURCHASE
OF A REMANUFACTURED PRODUCT.**

To make sure you get the most out of your product, be sure to register online at

snowjoe.com

to enjoy full product support.

AFFIX SERIAL NUMBER LABEL



ROTATING ARTIFICIAL TREE STAND

OPERATOR'S MANUAL

A Division of Snow Joe®, LLC

Model H092-RM

Form No. SJ-H092-RM-880E-V1

IMPORTANT! Safety Instructions

All Operators Must Read These Instructions Before Use

Any electrical appliance can be dangerous if used incorrectly. Some of the safety precautions given in this manual apply generally to many appliances. Other warnings are specific to the use of this tree stand.

You and any other operator of this rotating tree stand must read, understand and follow these instructions in their entirety, and should re-read them at the start of each holiday season. Failure to follow any of these instructions may result in **ELECTRIC SHOCK, FIRE and/or serious PERSONAL INJURY.**

General Safety WARNINGS!

Notice the personal safety alert symbol \triangle used in this manual to draw your attention to a WARNING given along with the particular operating instruction. This means that an operation requires special ATTENTION, CAUTION and AWARENESS.

1. This tree stand is for **indoor seasonal** use for artificial trees only. Do not install on a permanent basis or use for commercial purposes.
2. Do not use this product for other than its intended use.
3. Keep tree stand away from all heat sources including gas and electric heaters, fireplaces, and candles.
4. Use the electric cord safely.
 - A. Electric plugs must match the outlet. Never modify the plug in any way. Unmodified plugs and matching outlets will reduce the risk of electric shock.
 - B. Do not use with an extension cord unless the plug can be fully inserted.
 - C. Do not abuse the cord. Keep cord away from heat sources, oil and sharp edges.
 - D. Do not place the cord in high traffic areas of your home, or close doors or windows on the cord.
 - E. Never carry the tree stand by its cord or yank the cord to disconnect it from electrical outlet.
 - F. Replace or properly repair damaged cords. If cord is damaged in any manner while plugged in, pull cord from wall receptacle.
 - G. Do not secure the cord with staples or nails, or place on sharp hooks or nails, since this may damage the cord and increase the risk of electric shock.
 - H. Turn off the power switch and disconnect the cord before decorating your tree or when leaving the tree stand unattended.
 - I. Contact with water while operating the tree stand can result in electric shock and serious personal injury. Do not handle the plug or the appliance with wet hands or while standing in water.
5. **WARNING \triangle** Keep out of reach of small children. This product is not a toy. To avoid risk of electric shock, fire, and serious bodily injury, do not play with tree stand or allow access to small children or unauthorized users.
6. Moving parts present risks. Keep your face, hair, clothing, hands and feet away from the rotating spindle. Shut off and disconnect cord before touching any moving parts.
7. Make sure the tree can rotate freely without any obstructions, such as walls curtains, lamp cords, or furniture. If the tree's rotation is obstructed, you will hear a clicking sound every fifteen seconds, which will stop once the obstructing object is removed.
8. Keep tree skirts, tinsel, garland, and other holiday decorations away from rotating spindle.
9. This product has a polarized plug (one blade is wider than the other) as a feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless plug can be fully inserted. Do not alter or replace the plug. It is acceptable to omit this item if the product does not employ a polarized plug.
10. Do not cover the product with cloth, paper or any material not part of the product when in use.
11. Unplug the product when leaving the house, or when retiring for the night, or if left unattended.

Assembly

⚠ **CAUTION** ⚠

Inspect wiring, which, if damaged during shipping, may cause serious bodily injury during equipment use. If any damage is seen or suspected, do not assemble. Instead, contact Snow Joe Customer Service (1-866-766-9563) for assistance.

Handle with care during assembly so that electrical wiring does not become damaged.

Getting Started

1. Remove the tree stand from the box and familiarize yourself with the unit (Fig. 1).

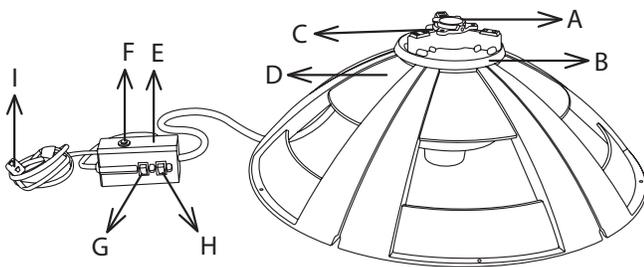


Figure 1

- | | |
|------------------------|--------------------|
| A. Spindle Screw | F. Reset Switch |
| B. Rotating Power Base | G. Light Switch |
| C. Tree Base Collar | H. Rotation Switch |
| D. Tree Stand Base | I. Power Cord |
| E. Switch Box | |

2. Inspect the stand carefully for shipping damage. If damage is seen or suspected (such as damaged wire insulation, cracks in the enclosures, loose connections or exposed copper wire), do not assemble. Instead, contact Snow Joe Customer Service for assistance.

Tree Installation

1. Locate the tree base collar in the parts bag and slide the collar onto the tree pole (Fig. 2). Do not attempt to insert the tree pole into the collar while the collar is screwed into the tree stand.

Note: This tree stand will accommodate standard size tree poles up to 1.25 in. (3.18 cm) in diameter. If the collar will not slip onto the tree pole, this indicates that your tree pole is not a standard size.

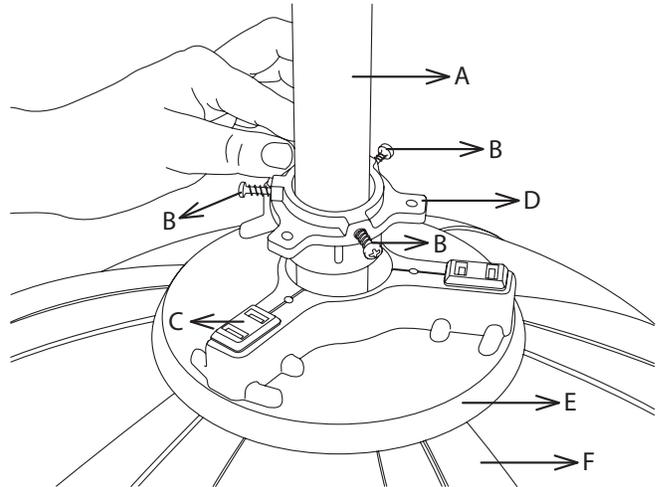


Figure 2

- | | |
|-------------------------|------------------------|
| A. Artificial Tree Pole | D. Tree Base Collar |
| B. Spindle Screws (x3) | E. Rotating Power Base |
| C. Receptacle | F. Tree Stand Base |

2. Insert the tree pole into the stand.

Note: For poles with pointed ends (crimps), carefully turn the pole into the spindle until the crimp hooks onto the rib inside the spindle (Fig. 3).

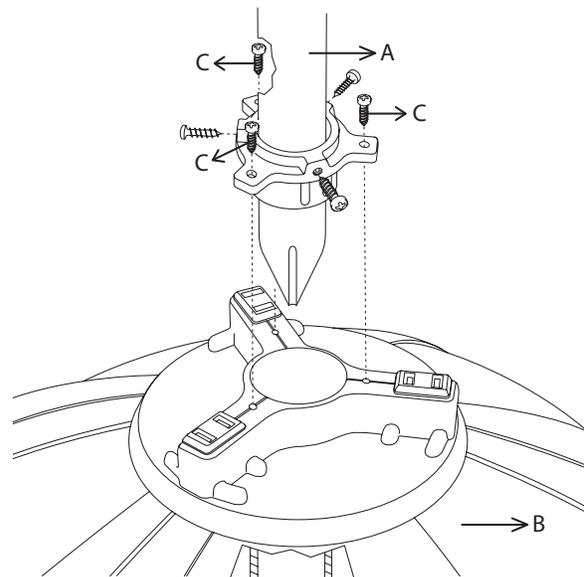


Figure 3

- | | |
|-------------------------|--------------------|
| A. Artificial Tree Pole | B. Tree Stand Base |
| C. Collar Screws (x3) | |

- Slide the collar down the pole and secure it to the tree stand by fastening the three (3) collar screws (Fig. 4).
IMPORTANT: Do not over-tighten the screws, since this can damage the tree stand.

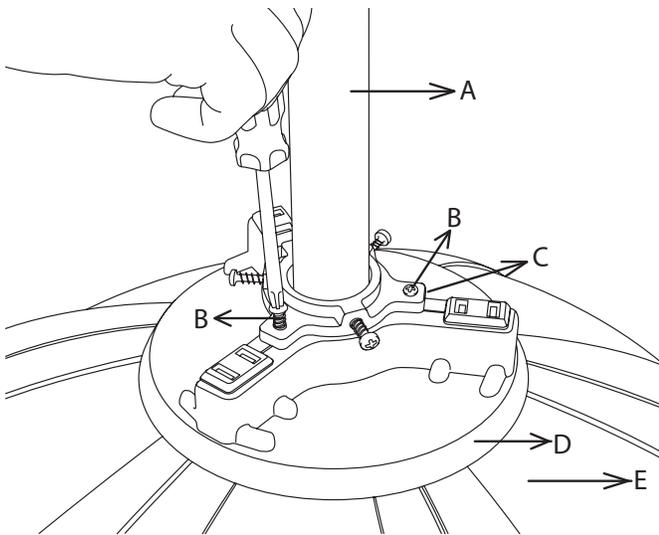


Figure 4

- | | |
|-------------------------|------------------------|
| A. Artificial Tree Pole | D. Rotating Power Base |
| B. Collar Screws (x3) | E. Tree Stand Base |
| C. Tree Base Collar | |

- Tighten all three (3) spindle screws to secure the tree in a stable, upright position (Fig. 5).

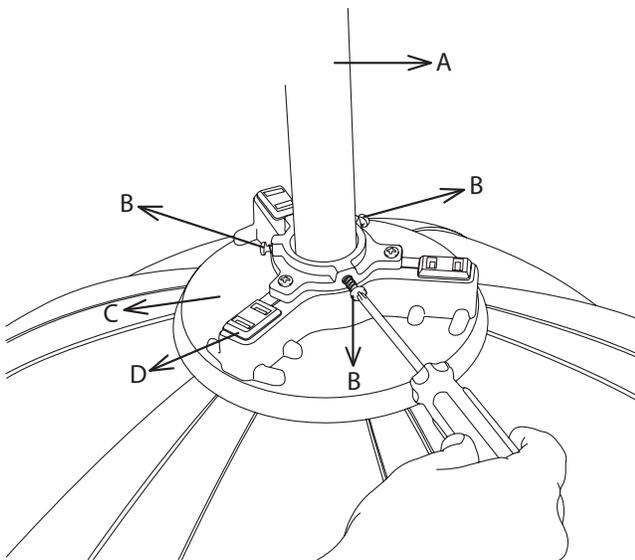


Figure 5

- | | |
|-------------------------|------------------------|
| A. Artificial Tree Pole | C. Rotating Power Base |
| B. Spindle Screws (x3) | D. Receptacle |

- Make sure the tree fits securely inside the collar before turning on the tree stand. Once the tree is installed inside the stand, do not rock it back and forth since this can damage the stand. If the tree does not fit properly even after tightening the collar screws, please contact Snow Joe Customer Service at 1-866-766-9563.

Operation



WARNING



Electric shock can cause **SEVERE INJURY** or **DEATH**. Heed these warnings:

- Do not allow any part of tree stand to make contact with water while powered on. If the stand becomes wet while turned off, wipe dry before starting.
- Do not touch the tree stand or its plug with wet hands or while standing in water.
- Do not use with an extension cord unless the plug can be fully inserted.

- The electric cord has a polarized plug (Fig. 6), with one prong slightly longer and wider than the other. This plug can be inserted only one way into a polarized outlet. If the plug does not fit properly in the outlet, unplug it from the outlet and insert it in the reverse direction. If it still does not fit, seek the assistance of a qualified electrician.

Note: If using an extension cord with this unit, make sure that the original plug fits snugly into the extension cord slots, which are likewise polarized.

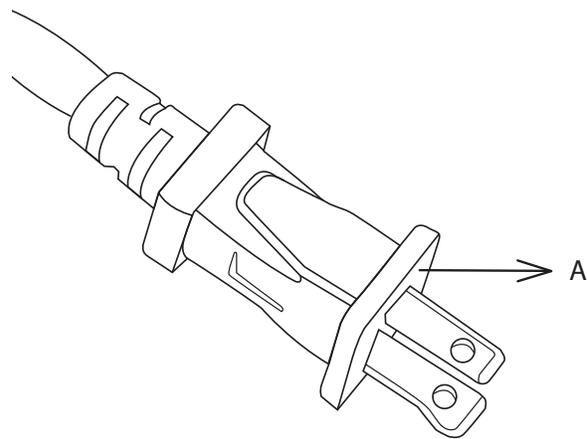


Figure 6

- | |
|--------------------|
| A. Electrical Cord |
|--------------------|



WARNING



Damaged electric cords present risk of fire, electrical shock and serious bodily injury.

- Before operating this tree stand, carefully examine its electrical cord. If the cord is damaged, do not use this tree stand. Instead, promptly inform the dealer where you bought the tree stand or contact Snow Joe Customer Service (1-866-766-9563).
- Before lighting your tree, carefully inspect the light strings for frayed wires, damaged sockets and worn plugs. If any damage is seen or suspected, do not use.

2. Before assembling and decorating your tree, check to make sure that the tree stand works properly by plugging a light set into one of the three electrical receptacles located on the spindle (Fig. 7). Flip the LIGHT and ROTATE switches located on the control box to the ON position (Fig. 8). The lights should light up and the spindle should start rotating. Flipping the LIGHT and ROTATE switches to the OFF position should likewise turn off these respective functions.

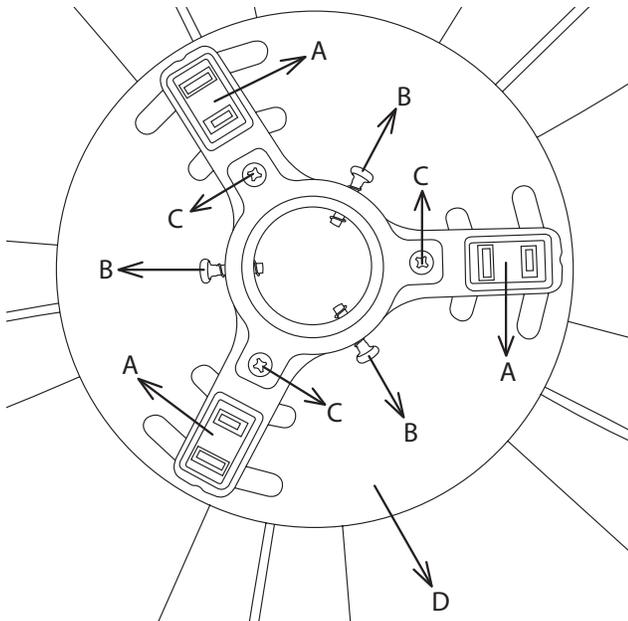


Figure 7

- | | |
|------------------------|------------------------|
| A. Receptacle | C. Collar Screws (x3) |
| B. Spindle Screws (x3) | D. Rotating Power Base |

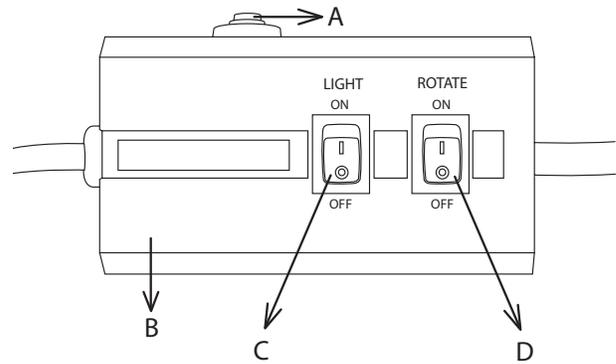


Figure 8

- | | |
|-----------------|--------------------|
| A. Reset Switch | C. Light Switch |
| B. Switch Box | D. Rotation Switch |

3. Assemble, light and decorate your tree.



WARNING



Carefully read and follow all manufacturers' instructions for the light sets, extension cords, trees and decorations you wish to use.

- Use only UL or ETL listed light sets and extension cords.
- Inspect all light sets for wear and damage. If any damage is seen or suspected, do not use.

4. This tree stand is rated for a maximum of 8 Amps (960 Watts) at 120 Volts, AC 60 Hz. This typically corresponds to 2,400 lights for 50 or 100 miniature light sets; 1,680 lights for 35 or 70 miniature light sets. Double check manufacturer's label on light sets before plugging them into the tree stand.

Note: Plug a maximum of 3 miniature light sets together end-to-end and a maximum of 2 cool burn C7 light sets together end-to-end. Use a UL listed extension cord if necessary to reach maximum number of lights.



SNOW JOE® + SUN JOE® REFURBISHED GOODS WARRANTY

GENERAL CONDITIONS:

Snow Joe® + Sun Joe® operating under Snow Joe®, LLC warrants this refurbished product to the original purchaser for 90 days against defects in material or workmanship when used for normal residential purposes. If a replacement part or product is needed, it will be sent free of charge to the original purchaser except as noted below.

The duration of this warranty applies only if the product is put to personal use around the household. It is the owner's responsibility to correctly perform all maintenance and minor adjustments explained in the owner's manual.

HOW TO OBTAIN YOUR REPLACEMENT PART OR PRODUCT:

To obtain a replacement part or product, please visit snowjoe.com/help or email us at help@snowjoe.com for instructions. Please be sure to register your unit beforehand to speed up this process. Certain products may require a serial number, typically found on the decal affixed to the housing or guard of your product. All products require a valid proof of purchase.

EXCLUSIONS:

- Wearing parts like belts, augers, chains and tines are not covered under this warranty. Wearing parts can be purchased at snowjoe.com or by calling 1-866-SNOWJOE (1-866-766-9563).
- Batteries are covered in full for 90-days from the date of purchase.

Snow Joe® + Sun Joe® may from time to time change the design of its products. Nothing contained in this warranty shall be construed as obligating Snow Joe® + Sun Joe® to incorporate such design changes into previously manufactured products, nor shall such changes be construed as an admission that previous designs were defective.

This warranty is intended to cover product defects only. Snow Joe®, LLC is not liable for indirect, incidental or consequential damages in connection with the use or misuse of the Snow Joe® + Sun Joe® products covered by this warranty. This warranty does not cover any cost or expense incurred by the purchaser in providing substitute equipment or service during reasonable periods of malfunction or non-use of this product while waiting for a replacement part or unit under this warranty. Some states do not allow exclusions of incidental or consequential damages so the above exclusions may not apply in all states. This warranty may give you specific legal rights in your state.

HOW TO REACH US:

We're here to help Monday through Friday from 9AM to 6PM EST. You can reach us at 1-866-SNOWJOE (1-866-766-9563), online at snowjoe.com, via email at help@snowjoe.com or tweet us @snowjoe.

EXPORTS:

Customers who have purchased Snow Joe® + Sun Joe® products exported from the United States and Canada should contact their Snow Joe® + Sun Joe® distributor (dealer) to obtain information applicable to your country, province or state. If for any reason, you are not satisfied with the distributor's service, or if you have difficulty obtaining warranty information, contact your Snow Joe® + Sun Joe® seller. If in the event your efforts are unsatisfactory, please reach out to us directly.



snowjoe.com