



SPX-ESW4-RM ASSEMBLY QUICK GUIDE

If you have any questions or comments,
please call the Snow Joe® + Sun Joe® customer service department at:

1-866-SNOWJOE (1-866-766-9563)

**THANKS FOR YOUR PURCHASE
OF A REMANUFACTURED PRODUCT.**

To make sure you get the most out of
your product, be sure to register online at

sunjoe.com

to enjoy full product support.

PASTE UPC LABEL HERE



SPX-ESW4-RM ASSEMBLY QUICK GUIDE

If you have any questions or comments,
please call the Snow Joe® + Sun Joe® customer service department at:

1-866-SNOWJOE (1-866-766-9563)


SPX200/1000 Series



SPX2000, SPX2500, SPX2600, SPX4003, SPX4003-ULT



Most SPX2000 Series + SPX4003-ELT, SPX7001E

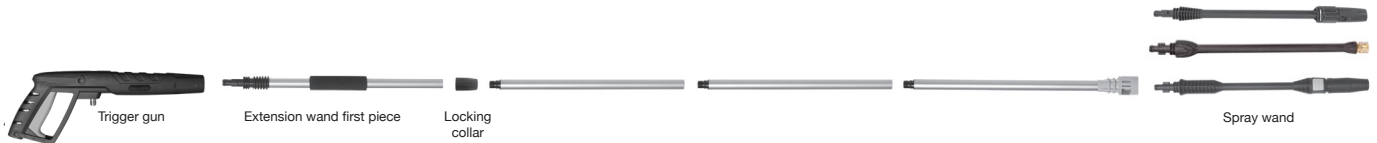

Most SPX3000 Series + Most SPX4000 Series



**FOR USE WITH
SPX200/1000 SERIES:**

1. Disconnect your spray wand assembly so that only the middle wand remains attached to your trigger gun.
2. Take the first piece of the extension wand and align the two tabs with the inside of the middle wand.
3. Once aligned, push in the extension wand into the middle wand, twist counter clockwise to lock into trigger gun.
4. Use the locking collar to secure the wand in place. Move up and twist to lock.

**FOR USE WITH
SPX2000, SPX2500, SPX2600
SPX4003, SPX4003-ULT:**

1. If not already done, detach your spray wand from your trigger gun.
2. Take the first piece of the extension wand and align the two tabs with the inside of the gun.
3. Once aligned, push in the extension wand into the trigger gun, twist counter clockwise to lock into trigger gun.
4. Use the locking collar to secure the wand in place. Move up and twist to lock.

**FOR USE WITH
MOST SPX2000 SERIES +
SPX4003-ELT, SPX7001E:**

1. If not already done, detach your spray wand from your trigger gun.
2. Take the first piece of the extension wand and align the two tabs with the inside of the gun.
3. Once aligned, push in the extension wand into the trigger gun, twist counter clockwise to lock into trigger gun.
4. Use the locking collar to secure the wand in place. Move up and twist to lock.

**FOR USE WITH
MOST SPX3000 SERIES +
MOST SPX4000 SERIES:**

1. If not already done, detach your spray wand from your trigger gun.
2. Attach the transfer adapter to your trigger gun.
3. Take the first piece of the extension wand and align the two tabs with the inside of the transfer adapter.
4. Once aligned, push in the extension wand and twist counter clockwise to lock the wand into the trigger gun.
5. Use the locking collar to secure the wand in place. Move up and twist to lock.



SNOW JOE® + SUN JOE® REFURBISHED GOODS WARRANTY

GENERAL CONDITIONS:

Snow Joe® + Sun Joe® operating under Snow Joe®, LLC warrants this refurbished product to the original purchaser for 90 days against defects in material or workmanship when used for normal residential purposes. If a replacement part or product is needed, it will be sent free of charge to the original purchaser except as noted below.

The duration of this warranty applies only if the product is put to personal use around the household. It is the owner's responsibility to correctly perform all maintenance and minor adjustments explained in the owner's manual.

HOW TO OBTAIN YOUR REPLACEMENT PART OR PRODUCT:

To obtain a replacement part or product, please visit snowjoe.com/help or email us at help@snowjoe.com for instructions. Please be sure to register your unit beforehand to speed up this process. Certain products may require a serial number, typically found on the decal affixed to the housing or guard of your product. All products require a valid proof of purchase.

EXCLUSIONS:

- Wearing parts like belts, augers, chains and tines are not covered under this warranty. Wearing parts can be purchased at snowjoe.com or by calling 1-866-SNOWJOE (1-866-766-9563).
- Batteries are covered in full for 90-days from the date of purchase.

Snow Joe® + Sun Joe® may from time to time change the design of its products. Nothing contained in this warranty shall be construed as obligating Snow Joe® + Sun Joe® to incorporate such design changes into previously manufactured products, nor shall such changes be construed as an admission that previous designs were defective.

This warranty is intended to cover product defects only. Snow Joe®, LLC is not liable for indirect, incidental or consequential damages in connection with the use or misuse of the Snow Joe® + Sun Joe® products covered by this warranty. This warranty does not cover any cost or expense incurred by the purchaser in providing substitute equipment or service during reasonable periods of malfunction or non-use of this product while waiting for a replacement part or unit under this warranty. Some states do not allow exclusions of incidental or consequential damages so the above exclusions may not apply in all states. This warranty may give you specific legal rights in your state.

HOW TO REACH US:

We're here to help Monday through Friday from 9AM to 7PM EST and Saturday and Sunday 9AM to 4PM. You can reach us at 1-866-SNOWJOE (1 866-766-9563), online at snowjoe.com, via email at help@snowjoe.com or tweet us @snowjoe.

EXPORTS:

Customers who have purchased Snow Joe® + Sun Joe® products exported from the United States and Canada should contact their Snow Joe® + Sun Joe® distributor (dealer) to obtain information applicable to your country, province or state. If for any reason, you are not satisfied with the distributor's service, or if you have difficulty obtaining warranty information, contact your Snow Joe® + Sun Joe® seller. If in the event your efforts are unsatisfactory, please reach out to us directly.



snowjoe.com