

2 PERSON GRAVITY FREE RECLINER

GFC-49

READ THIS BEFORE ASSEMBLING & USING THIS PRODUCT


Remove the drink tray if applicable before folding your recliner. Recliner pictured may differ from the model you purchased. The images below are for reference only and your recliner and accessories may appear differently.

⚠ **CAUTION:** To avoid being pinched, keep fingers out of the area where the frames meet, especially while the frame is in motion (aka "Pinch Points"); such as during opening, reclining and closing the chair. Do not put your hands under armrest while in motion.


⚠ CAUTION: Make sure your recliner is completely unfolded before sitting in. Plelase be careful reclining while sitting in it. Body shape and weight will affect the way this recliner operates. Be careful and proceed with caution. To reduce the risk of injury, do not play on, stand, or jump on the recliner. The recliner is inteded for sitting and reclining only. Unlock the two locking mechanisms that are under the armresets before folding your recliner. If recliner is folded without doing so, the locking mechanism will wear.

WEIGHT CAPACITY: 600 lbs


OPENING THE RECLINER:

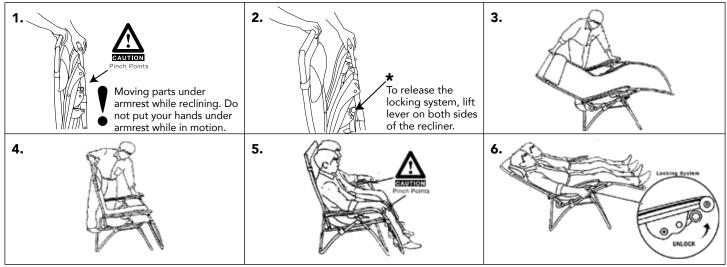

CLOSING THE RECLINER:

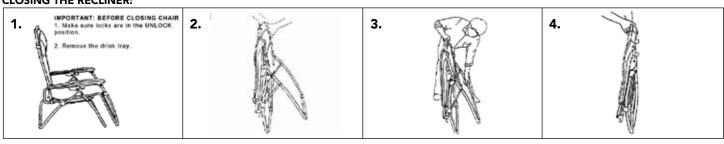

TRAY INSTALLATION:

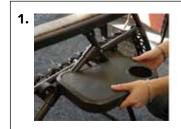

With recliner opened, place cup tray underneath the recliner armrest.



Tilt the wide opening of the drink tray up and attach it between the two meeting poles.



Start to slide drink tray down until it cannot be pushed down anymore. Press firmly to ensure cup holder is securely in place.

If you have any questions or comments, please call the Bliss Hammocks® customer service department at:

1-800-695-2626